


## 3相型 E I コア寸法表 <mm size>

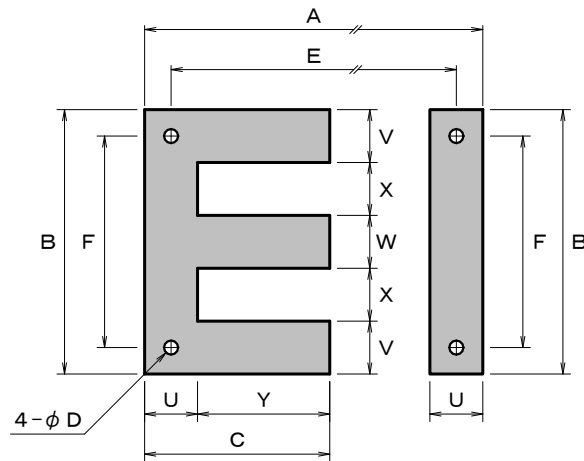

備考 ITME<数字>は<W>寸法を表示。

単位(mm)

ITEM	A	B	C	D	E	F	U	V	W	X	Y
3相-60B	330	300	270	12	270	240	60	60	60	60	210
3相-60C	260	280	200	11	200	220	60	60	60	60	140
3相-50A	245	250	195	10	195	200	50	50	50	50	145
3相-50B	275	250	225	12	225	200	50	50	50	50	175
3相-50C	220	230	170	10	170	180	50	50	50	40	120
3相-50D	260	230	210	10	210	180	50	50	50	40	160
3相-50E	320	230	270	10	270	180	50	50	50	40	240
3相-50F	225	250	175	12	175	200	50	50	50	50	125
3相-50G	260	260	205	11	210	210	55	50	50	55	150
3相-42A	204	210	162	8.5	162	168	42	42	42	42	120
3相-42B	230	210	188	10	188	168	42	42	42	42	146
3相-40A	180	200	140	10	140	160	40	40	40	40	100
3相-38	171	190	133	8.5	133	152	38	38	38	38	95
3相-32	144	160	112	8	112	128	32	32	32	32	80
3相-30	150	180	120	9	120	150	30	30	30	45	90
3相-27	134	141	107	8	107	114	27	27	27	30	80
3相-24	104	122	80	7	80	98	24	24	24	25	56
3相-22	110	122	88	6	88	100	22	22	22	28	66
3相-20	80	100	60	7	60	80	20	20	20	20	40
3相-20B	90	100	70	7	70	80	20	20	20	20	50
3相-18	80	98	62	6	62	80	18	18	18	22	44
3相-17	82	85	65	5	65	68	17	17	17	17	48
3相-13	58	70	45	4.5	45	57	13	13	13	15.5	32